



### General settings

Thermostat Name- Allows the thermostat name to be customised  
Alerts - Low and High temperature visual alerts can be set

### Display

Units-Temperature can be toggled between °C and °F  
Sleep- Sleep mode will turn the display off if there is no user input within a set period of time. If the display is in sleep mode the first touch on the display or an active alert will awaken the display. Options for sleep mode are Never, 1 Min, 10 Min or 1 Hour.  
Borders- The colour of the borders can be customised.  
Text- The colour of the text can be customised.



### Channel settings

To set up the output channel touch the setpoint box on the home screen.  
Setup - Channel control settings to select output type, timing, control type. The Input data underneath the Name and Setup buttons changes depending on the options that are selected in the Setup menu. Press the Ok button so save your selection and return to the home screen.



### Channel settings - setup menu

Output - Dimmer /Pulse/On/Off

### Timing

Constant - One temperature or setting continuously  
Day/Night- Day and Night can have individual settings  
Multi- 4 individual settings over 24hrs.

### Control

Heating- Channel operates as a Heating Thermostat  
Cooling- Channel operates as a Cooling thermostat.  
Fixed- Channel operates as a Fixed value. Operates a device at a fixed % over a period of time.  
**WARNING - NO TEMPERATURE CONTROL IN FIXED MODE**



### Constant control

Constant control is used when only one temperature setting is required in the 24hr cycle. To set the temperature simply touch the setting displayed on the right hand side of the screen. Enter the setting you require then touch OK.



### Day and Night

Day and Night mode allows you to create a realistic micro climate inside your vivarium. By selecting a different temperature for day-time and night-time it will allow your animal to experience the natural temperature changes that occur in the wild. Enter the time you would like the day-time to begin, then select the temperature for day-time. Then enter the start time for night-time and select the temperature for night-time.

Time- The start time for the period.  
Temperature- The control temperature for the period.



### Multi

Multi mode allows 4 different periods of temperature control in the 24hour cycle, this allows you to create an even more realistic climate than the day and night mode. For example you can have different settings for Morning, Midday, Evening and Night. Not all periods have to be used and EVO Lite will place your settings in chronological order. To delete a period select a period and delete the time. Touch a time slot from the left hand side of the display and enter the time you would like a new period to start. Then touch the setting to the right hand side of the period that you have just set and enter the temperature you would like for that period.



### Data Logging

The Evo Lite logs temperature whilst in use. The data can be set to display 24hrs or 1hr.

To access the data touch the current temperature area of the display to view the temperature data. The 24hr history graphs are useful for monitoring your heating requirements. It will allow you to see how quickly the temperature has changed when heating from cold for example. In the event of a failed heater it will also allow you to see how long ago the temperature started to drop. The graph is continuously updated whilst the Evo is switched on and is updated from the right hand side of the screen. 0 on the time axis is the most current update.

### Fuse

The Evo lite is fitted with a 5 Amp FF super fast fuse. This is a user servicable part and is available in Microclimate Fuse Packs from your retailer. The fuse is fitted to protect against faults external to the thermostat. This could be caused by bad connections such as bulb holders or the bulb failing. If you have no output from the main channel but the thermostat is showing power being sent to the main channel then check to see if the fuse is blown. Simply unplug the thermostat from the mains, unscrew the fuse holder from the side of the EVO lite and replace with a 5amp FF (super fast fuse) a normal speed fuse will not act quickly enough to protect the thermostat in the event that an external item that is connected to the thermostat malfunctions.

### Warranty

Your Microclimate Evo is covered by our 5 year parts & labour warranty. If you believe your thermostat is not working correctly firstly please follow the fuse replacement instructions above. If you are still having issues please call or email us as we may be able to help over the phone. If your thermostat needs to be repaired in the first 12 months there is no charge. If the thermostat is between 12 months and 5 years old there is a charge of £10 to cover the return delivery and paperwork.